

# Cleaning & Maintenance Instructions

## APR Ecocomp Furniture

Thankyou for choosing furniture from APR's ecocomp range.

Our range of WPC furniture will not rot, crack or splinter and requires no sanding, painting or staining.

To get the best out of your ecocomp furniture, it is important you follow the cleaning and maintenance instructions outlined below.

The amount of care and maintenance of your product will vary, depending on environmental situations, so it's recommended you clean your product as required.

### RECOMMENDED CLEANING METHOD

Correct cleaning of your ecocomp furniture is important and will ensure longevity of your product.

We recommend using a soft cloth or sponge with a bucket or hose to clean your furniture.

Household cleaning products such as detergent, methylated spirits, turpentine or kerosene are recommended. Follow the guidelines on the cleaning product label for use.

### NOT RECOMMENDED

High Pressure Sprayers are **not recommended**.

If you do need to use a High Pressure Sprayer, follow the guidelines below:

- Household Pressure Sprayer – ensure nozzle is at least 200mm or more away from the product.
- Industrial Pressure Sprayer – ensure nozzle is at least 500mm or more away from the product.

### DO NOT USE

Harsh chemicals will damage your WPC product.

**Do not** use caustic or alkaline cleaners, sugar soap, degreaser, ammonia or washing soda on your furniture.



For further information  
please contact:

**APR**

Lot 9, 500 Churchill Road  
Kilburn, South Australia 5084

T: +61 8 8359 4999

E: [sales@a-p-r.com.au](mailto:sales@a-p-r.com.au)

[www.a-p-r.com.au](http://www.a-p-r.com.au)